



Wiring diagrams

for phase-controlled (leading edge) dimmers AQ 1,3 kW and AQ 2 kW
and phase-interval controlled (lagging edge) dimmers AQ-0 0,7 kW and AQ-0 1,4 kW


AQ with internal potentiometer

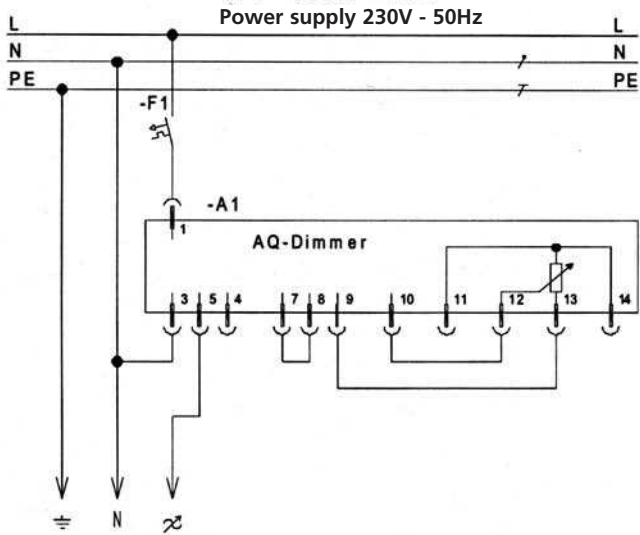


AQ with external potentiometer

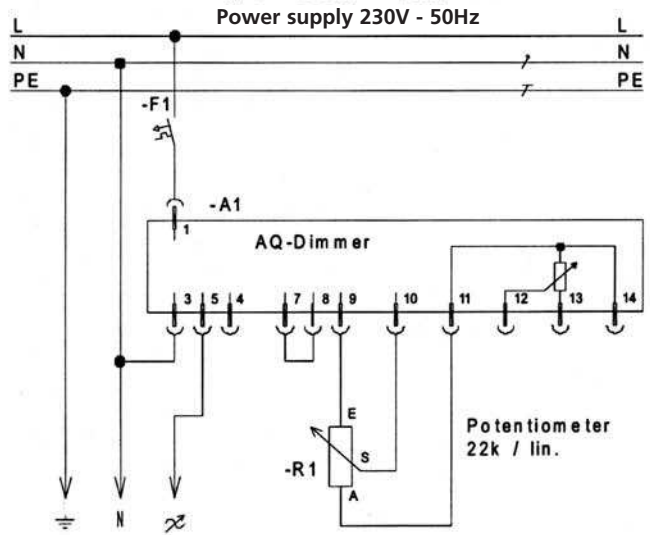

AQ with external potentiometer and ON/OFF function

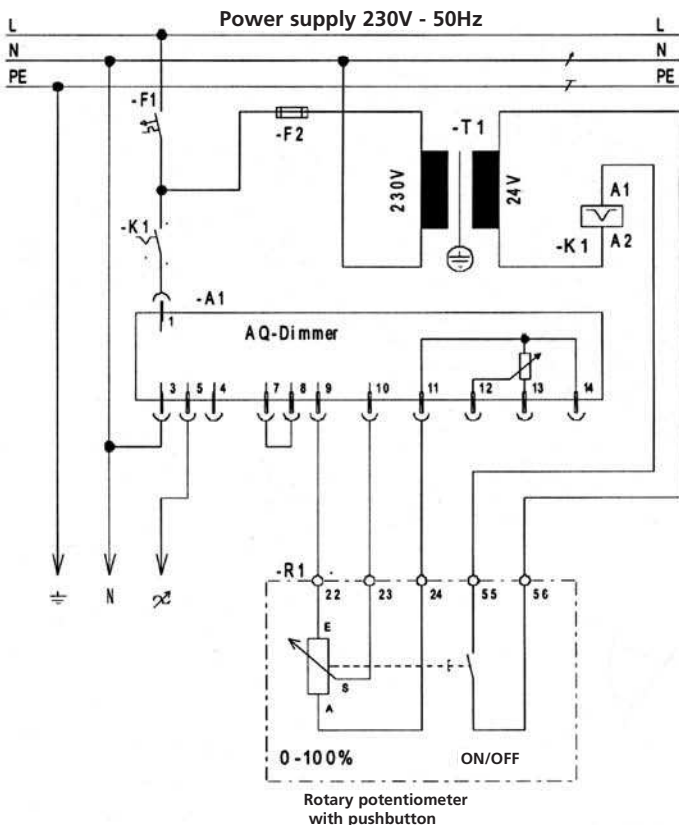

AQ with external control voltage 0-10V/0-20V

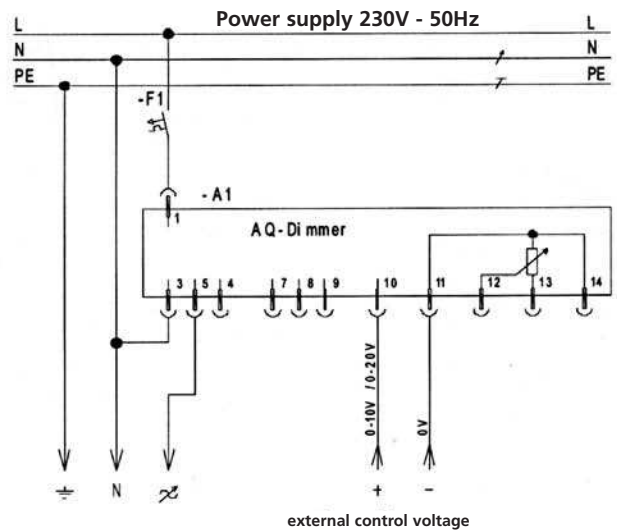

Wiring diagrams

for phase-controlled (leading edge) dimmers AQ 1,3 kW and AQ 2 kW
and phase-interval controlled (lagging edge) dimmers AQ-0 0,7 kW and AQ-0 1,4 kW

Load amplification with max. 3 ALTOQUICK-dimmers

